



To turn ON your TV



- 1) Press TV button
- 2) Press Power

To CHANGE CHANNELS



- 1) Press STB
- 2) Use CH button (right side)
- 3) Press + to move up a channel & - to move down a channel.

To CHANGE VOLUME

- 1) Use the VOL button (left side)
- 2) Press + to turn up and - to turn down

To ACCESS THE GUIDE




- 1) Press the yellow GUIDE button

- 2) Use the arrow keys to browse programming.
- 3) When you have selected a program press OK

To EXIT THE GUIDE

- 1) Press the EXIT button, next to the GUIDE button

To turn OFF your TV

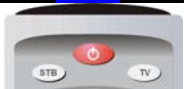

- 1) Press TV button
- 2) Press Power

Troubleshooting Steps

Make sure to always “tell” your remote what device you want it to control. If you want to control your set top box, like when you change channels on your cable, you must first press **(CBL)**. If you want to control your television, like when you turn off your system or change volume, you must press **(TV)** first.

If you are not getting your programming, or are not getting all of your programming, please follow these steps to troubleshoot:

- 1) Make sure your Set Top Box is turned on. The light on the box will stay lit regardless of whether the box is on or off. If you are unsure whether or not it's on, unplug the power cord for about 10 seconds and then plug it back in. The Set Top Box will automatically power on.
- 2) Make sure your TV is on its correct setting (ex: Channel 3, Video 1, ATV etc.)
- 3) If all else fails, go back to original settings: turn your box off (unplug it), turn your TV off and start from the beginning.

Still need help? Call us:

415-0500

